
English Guide
Part Names


- The number shown in each ▶ is the page number where the part's function and/or use are explained in Japanese.

Front view

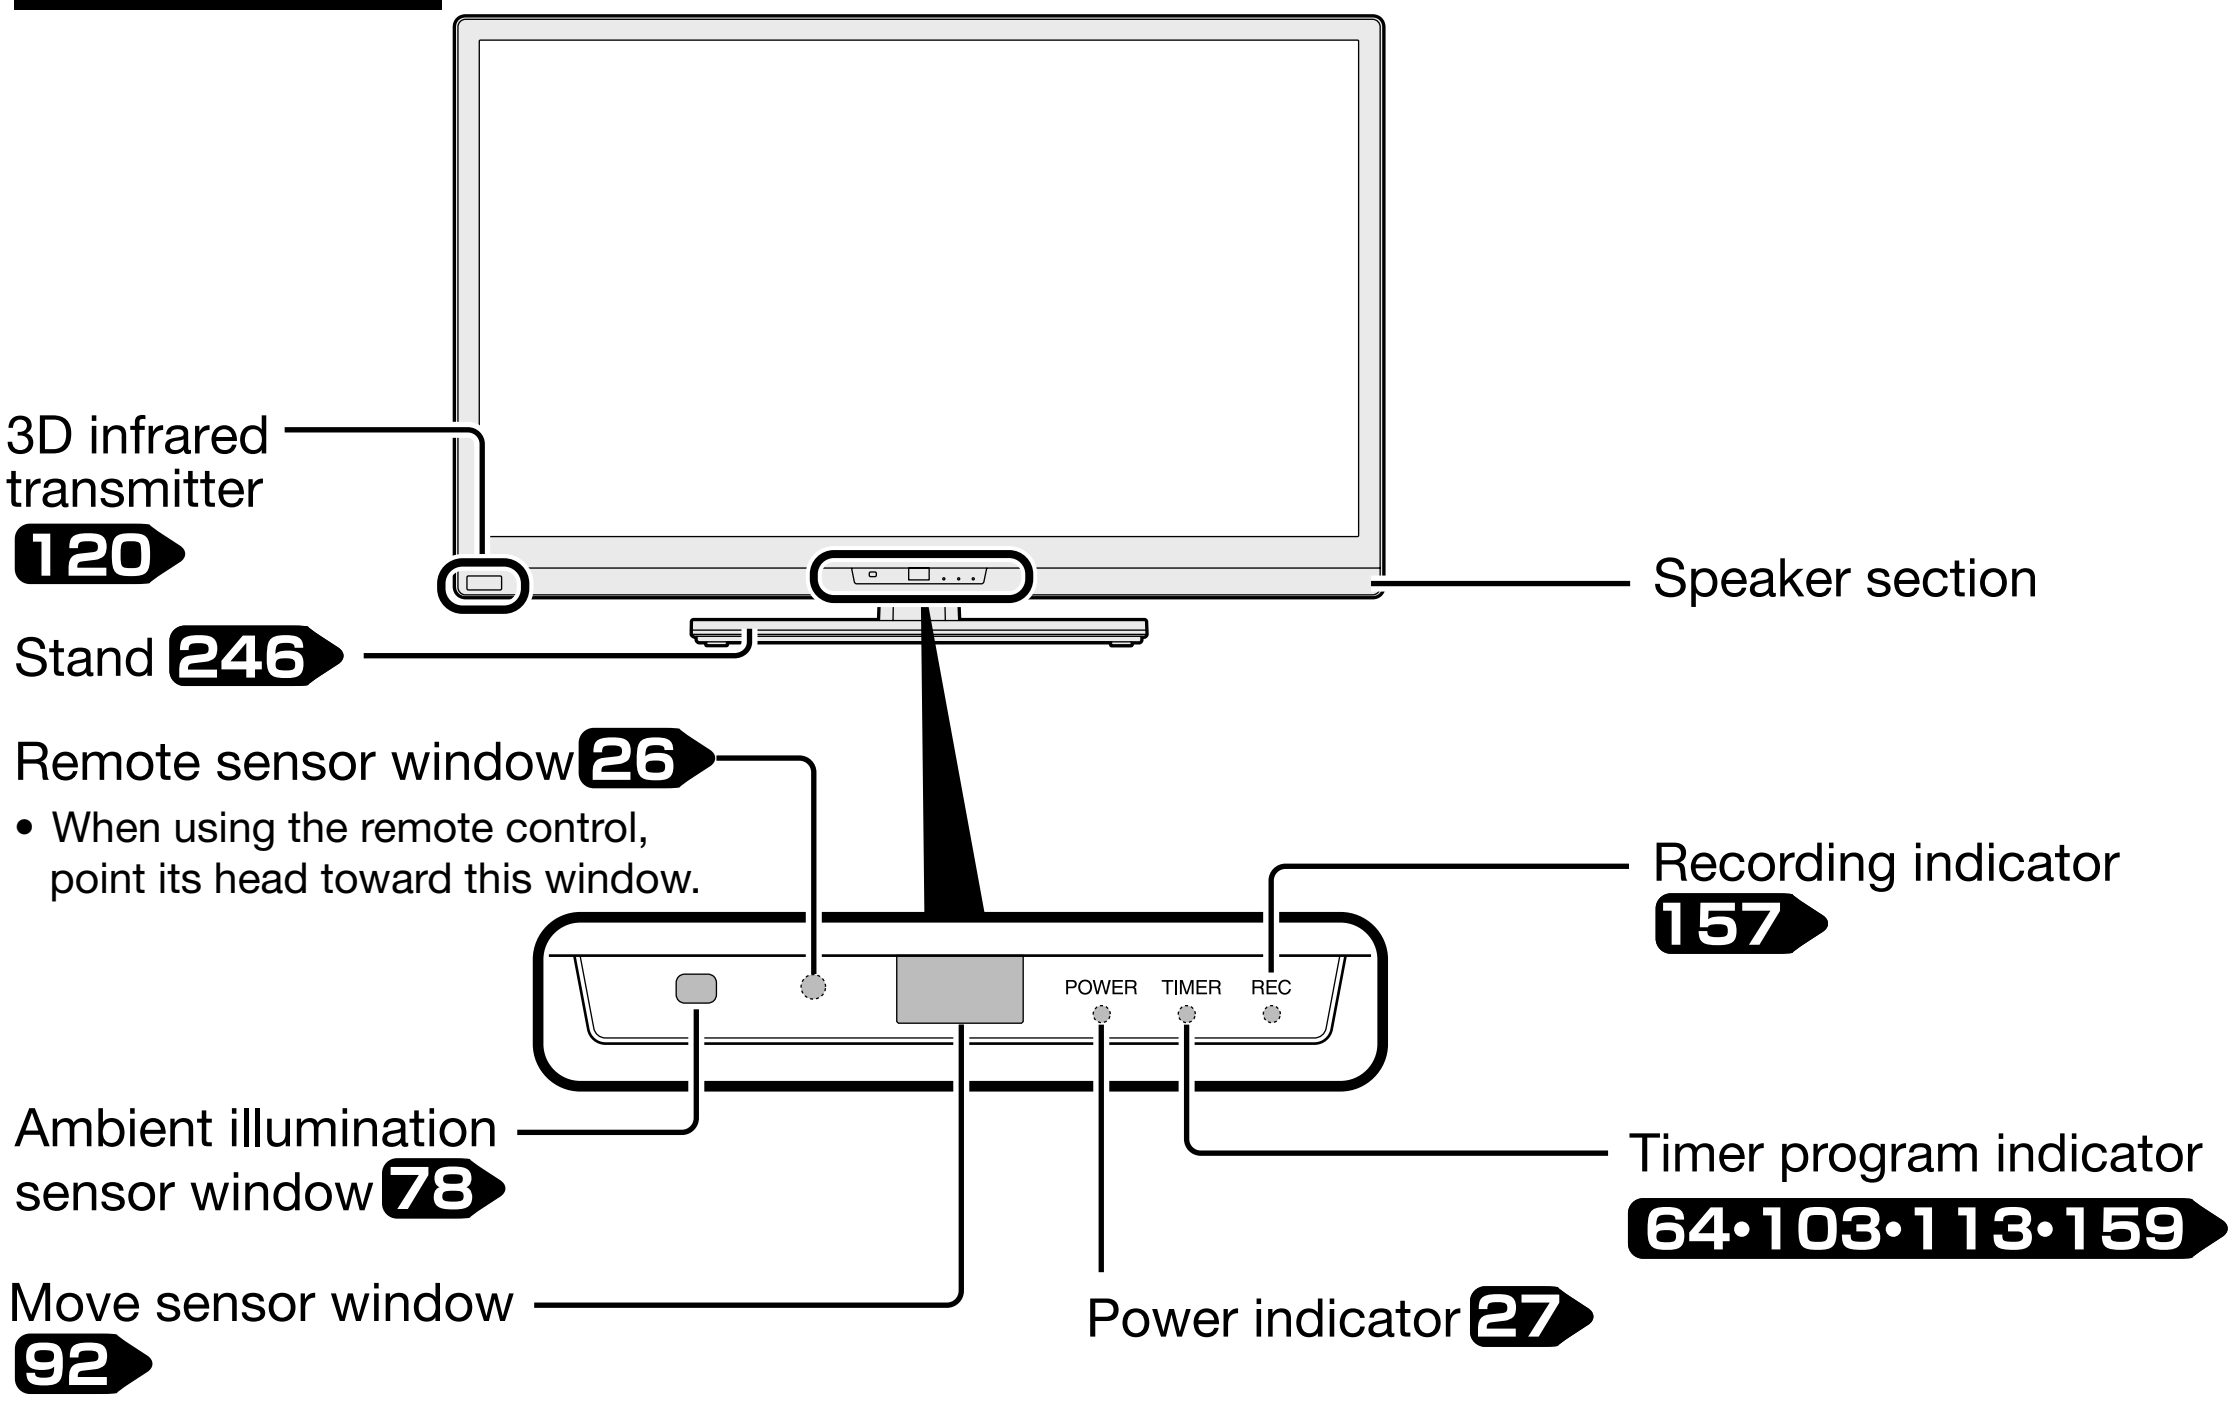


Adjusting the LCD panel angle
- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right side view

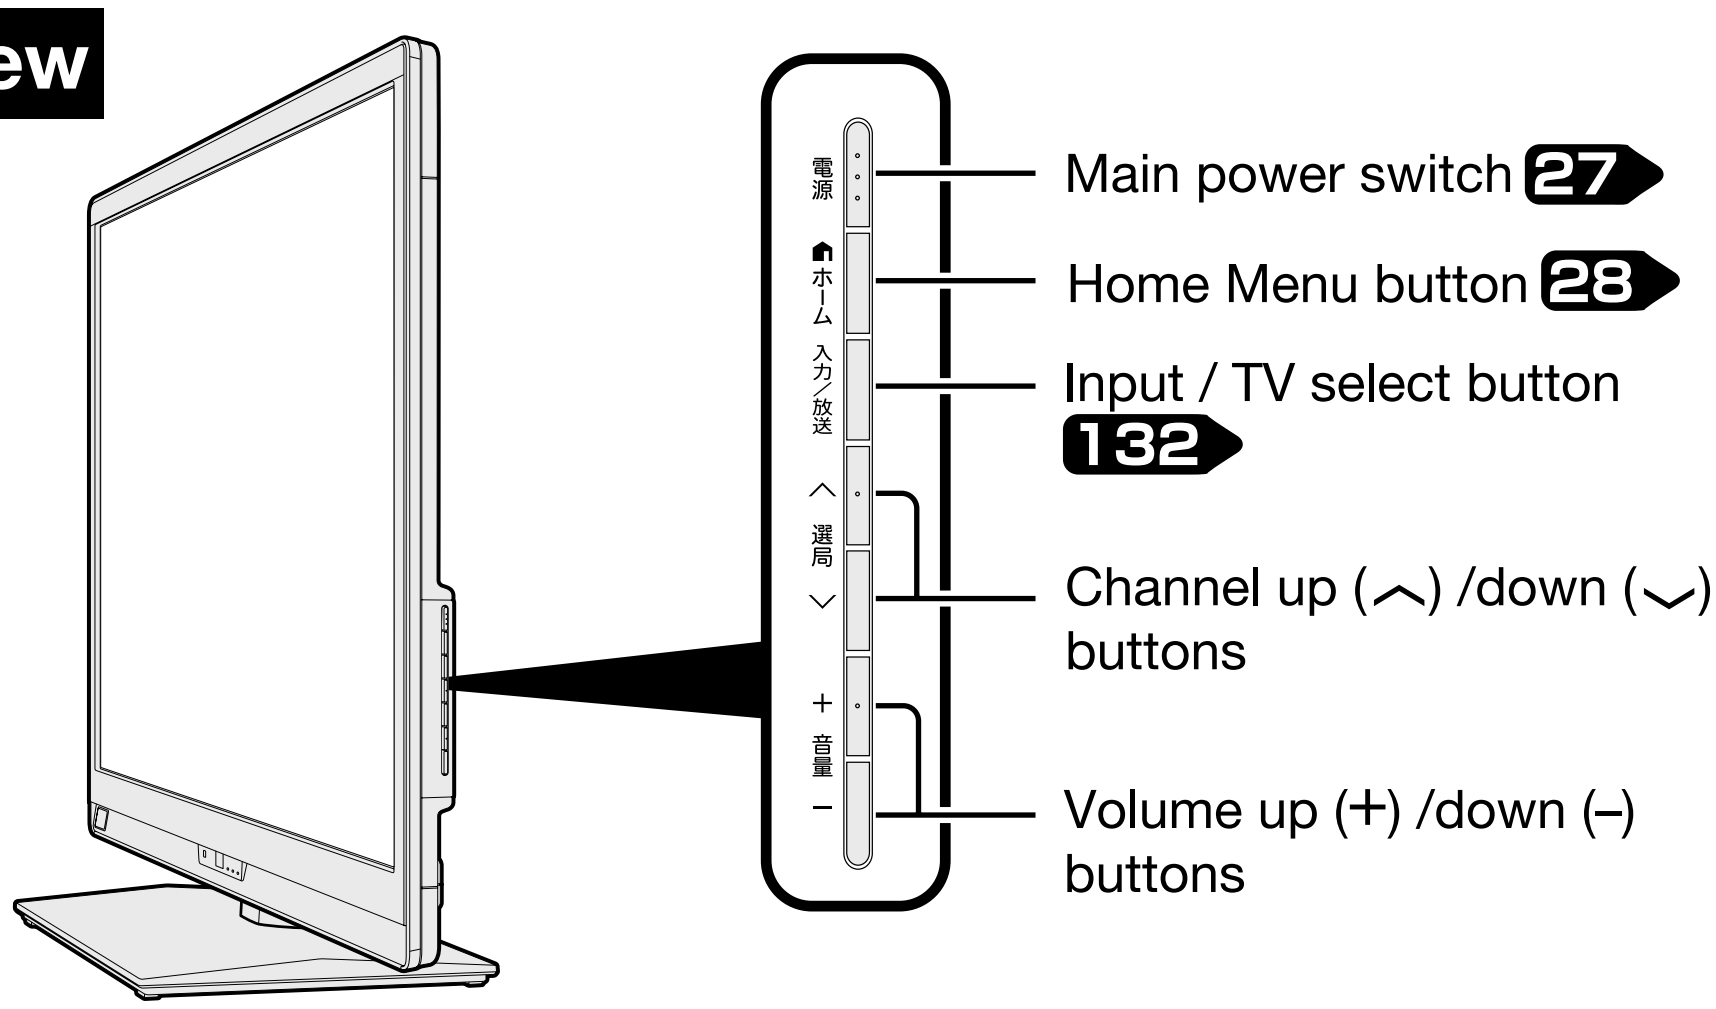

Back view

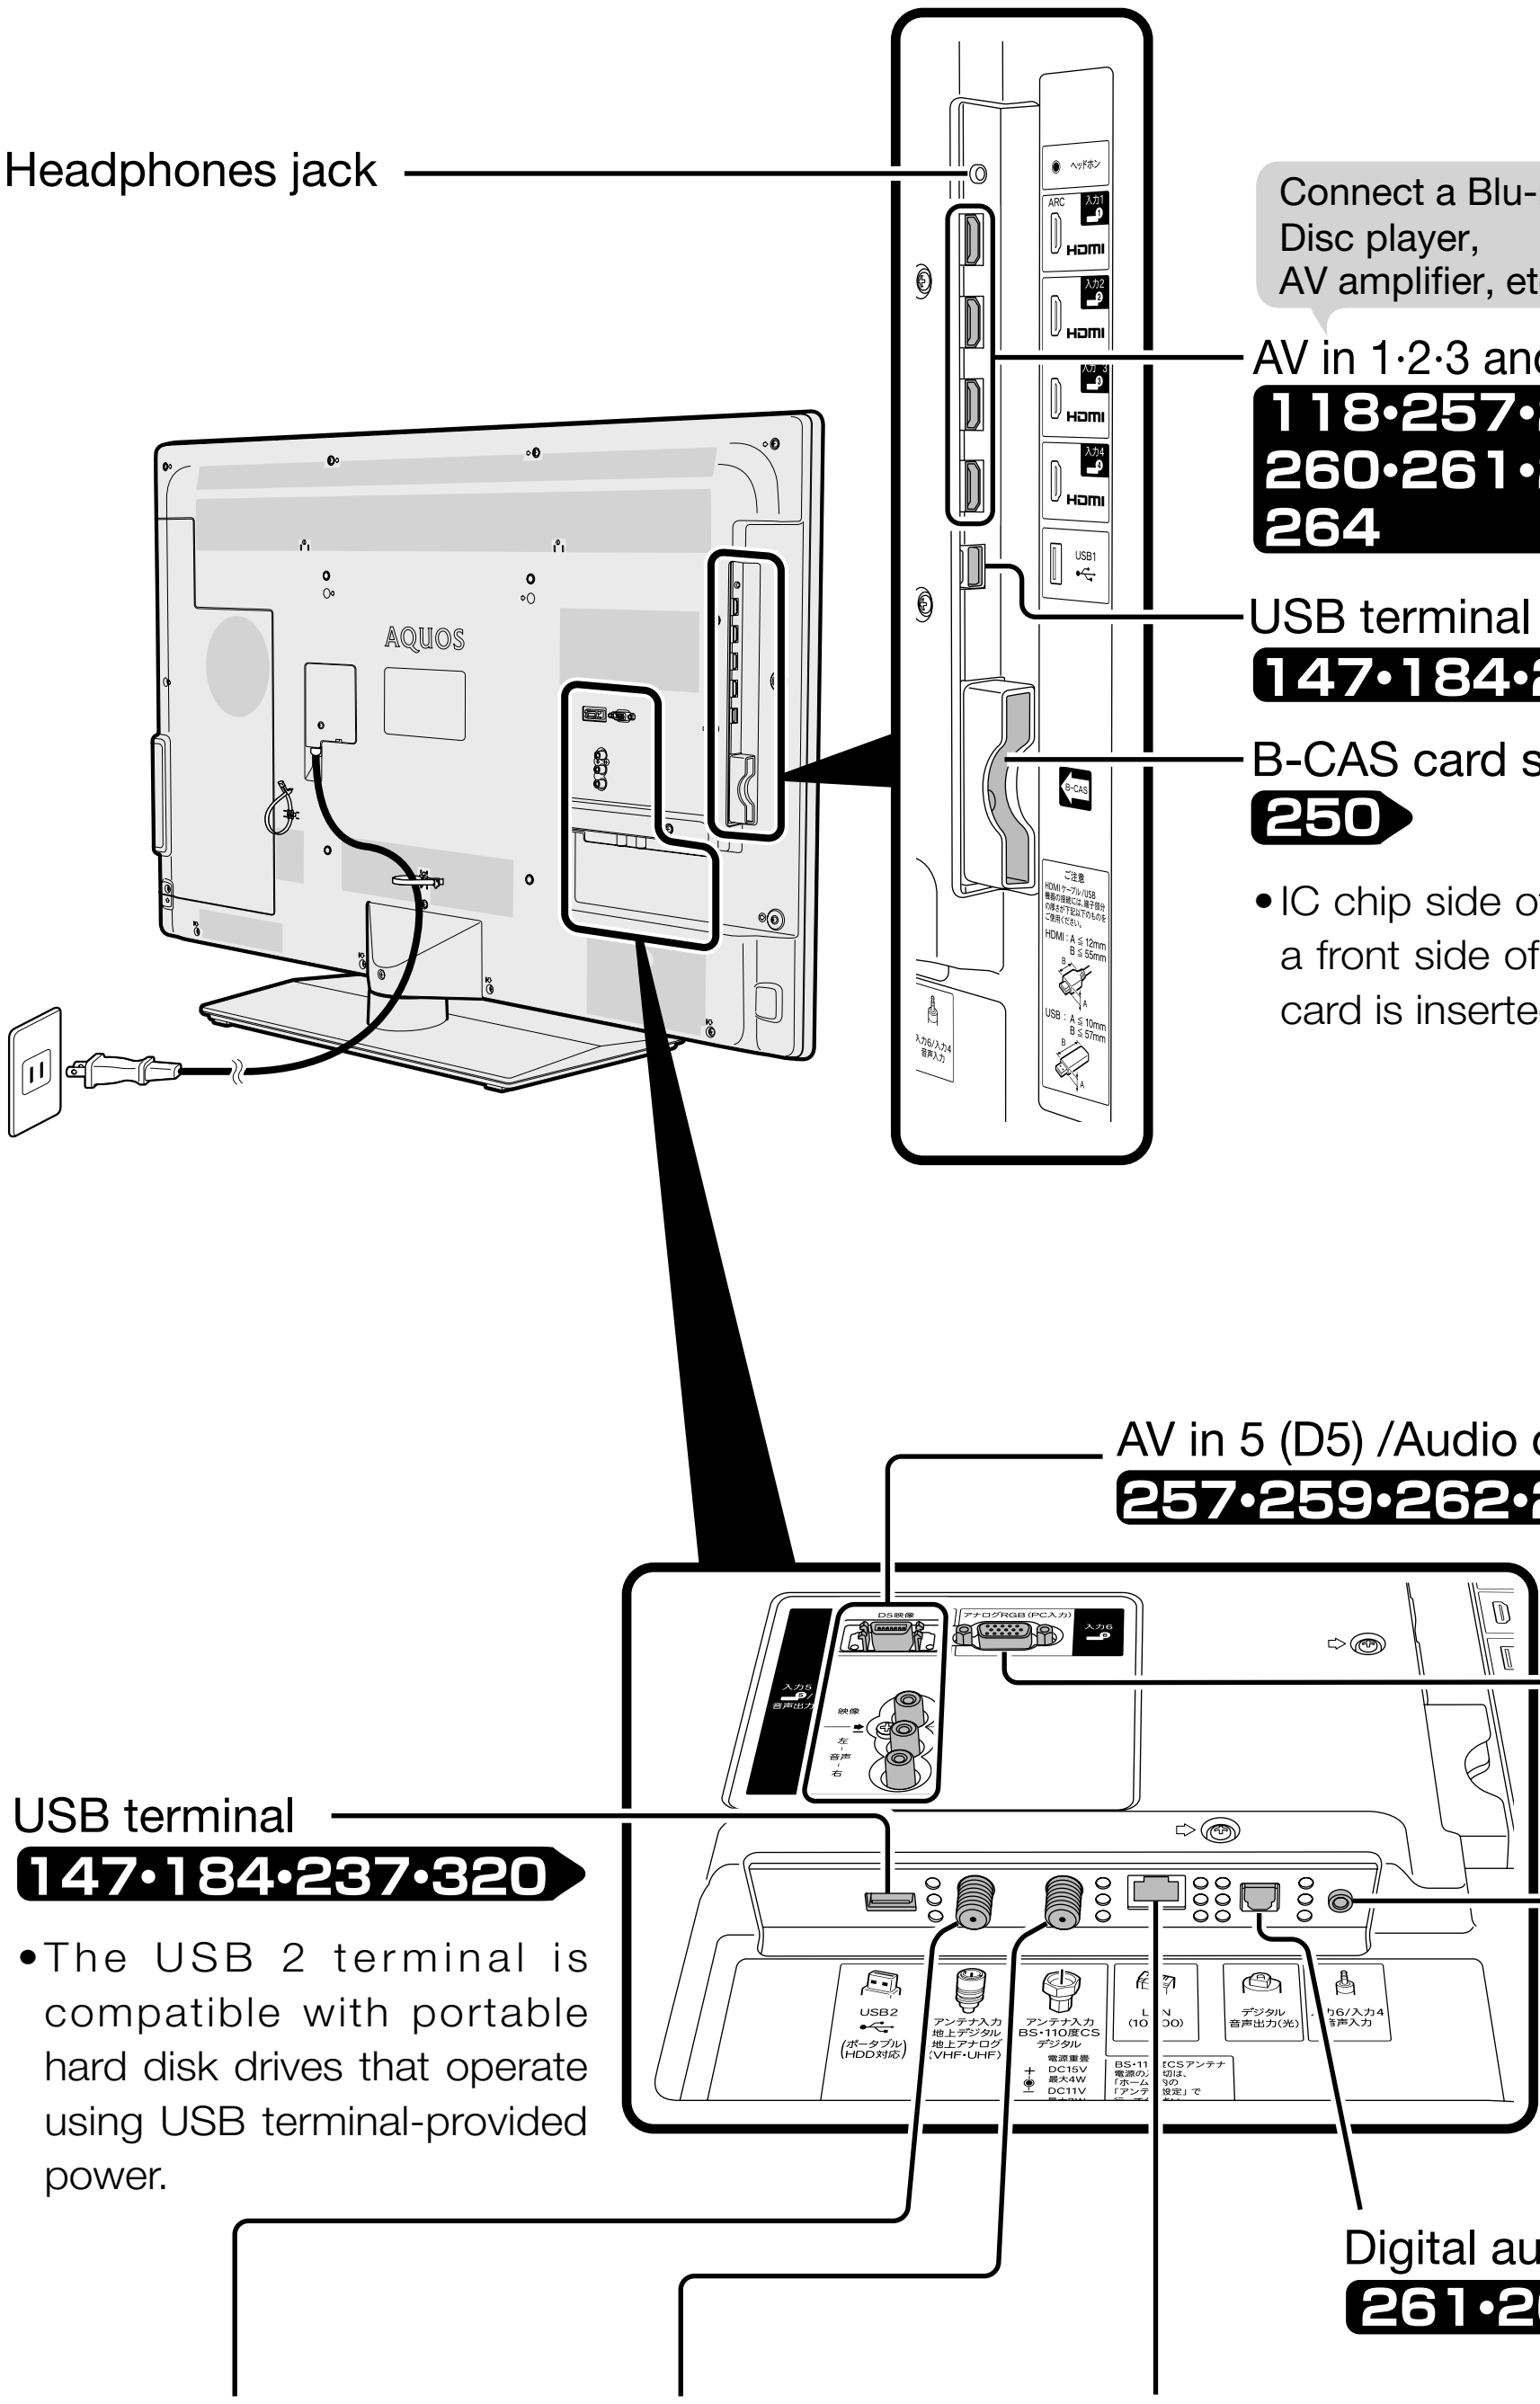

Headphones jack

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1·2·3 and 4 (HDMI)
118·257·258·260·261·262·264

USB terminal
147·184·237·320

B-CAS card slot
250

- IC chip side of B-CAS card is turned to a front side of this product, and B-CAS card is inserted.

AV in 5 (D5) /Audio out
257·259·262·263

AV in 6 (PC)
265

USB terminal
147·184·237·320

- The USB 2 terminal is compatible with portable hard disk drives that operate using USB terminal-provided power.

PC input (audio)
142·264·265

Digital audio output jack (optical)
261·263

VHF·UHF antenna input terminal
252～255

BS·CS 110 antenna input terminal
252～255

LAN jack (10BASE-T/100BASE-TX)
181·207

Remote Control Unit

Active/Standby 27
Press to engage the TV set in the active or standby mode.

地上 **Terrestrial digital select** 33
Terrestrial analog select 33
BS **BS select** 33
CS **CS select** 33
When selecting the CS digital channel for the first time. 273

データ連動
Linked data broadcast 36•213
Press to call the data broadcast linked with the current digital TV program.

消音 **Mute** 33•212
Press to mute audio.

＋ 音量 － **Volume up (+)/down (-)** 33•212
Press to adjust the volume.

番組表(予約) **EPG** 46•112•159
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム **Display the "Home" Menu** 28•29
Press to start some useful operations of the TV.

番組情報
Program info 39
Press to display detailed information on the current digital program.

Finish
Press to finish menu operation, etc.

録画消去
Delete recording 177
Press to delete a title recorded on the USB-HDD.

2画面
Split screen 56~57
Press to switch between the split screen mode and the normal screen mode.

操作切換
Operable screen 58
Press to switch the operable screen when the TV set is in the split screen mode.


静止
Freeze 37
Press to freeze the picture.

3桁入力
Digital channel number input 34
Use to select a digital channel by entering the 3-digit channel number.

画面表示
Display 38•39•325
Press to display or turn off the channel call, etc.

AVポジション
AV mode select 73
Press to select the picture/sound setting that best matches the current program.

オフタイマー
Sleep timer 96
Press to select the remaining time period after which the TV set automatically enters the standby mode.

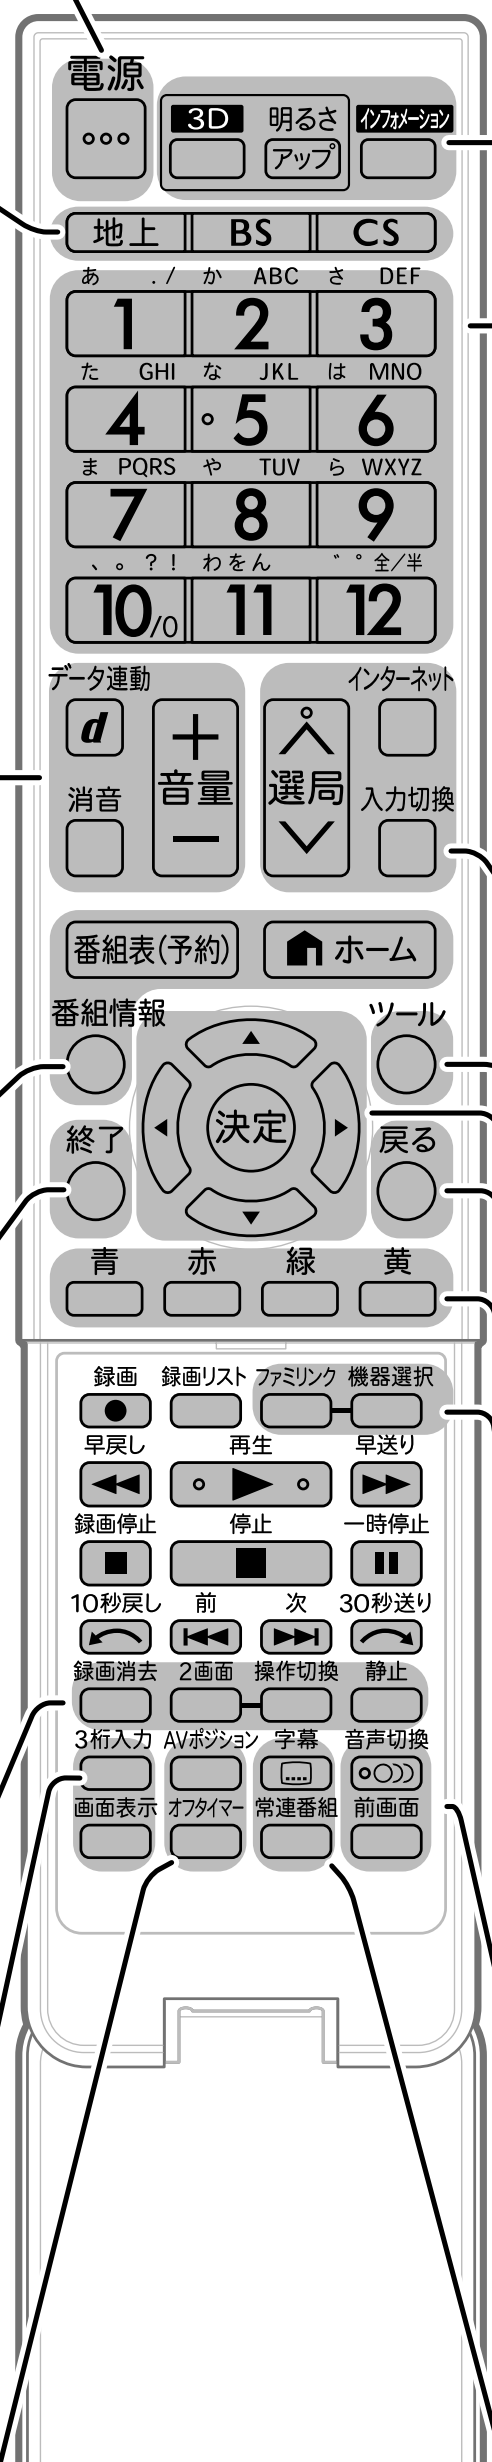

To open the cover
Hold the cover by the projections on both sides and lift upwards.

3D
3D 122~124•126•127
Press to switch to 3D mode when the TV set receives a 3D signal.

明るさ アップ **3D brightness adjustment** 128
Each time you press this button the brightness of 3D images is adjusted.

インフォメーション
Information 35
Press to display AQUOS Information.

Channel select 33•212
- Press to select a channel.
- Use to input a number for various settings.

インターネット
Internet 197•212•216•218•220
Press to connect to the internet.

選局 **Channel up (∧)/down (∨)** 33•43•212
Press to select channels in the ascending or descending order.
*CATV channels are factory set to be skipped. 291

入力切換
Input select 132
Press to select the input.

Display the Tool Menu 28•29•32

Cursor (up, down, left, right) 28•29
Use to select a menu item, column, etc.

決定 **Enter/Confirm** 28•29
Press to confirm a selected setting or menu item.

Return 28
Press to go back to the previous screen.

青 赤 緑 黄 **Color** 36•47~51•98
Use to operate EPGs and data program screens.

Familink 108~111•113~116•118•157•158•168~171
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切換
Audio select 60•213
Press to select the audio.

前画面
Previous screen
Press to return to the most recently viewed channel or input.

字幕
Caption 60•213
Press to display, select, or turn off captions when watching a digital program with captions.

常連番組
Recommended programs select 54~55
Press to select a program which the TV set recommends.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。



◇**おしらせ**◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1 Press ホーム and select with 決定

Select“設定”(Setup) on the Home menu.
ホームメニューから「設定」を選ぶ



2 Select with 決定

Select“(視聴準備)”(View Setting).
「(視聴準備)」を選ぶ



3 Select with 決定 Press 決定


Select “Language(言語)”.
「Language(言語)」を選ぶ



4 Select with 決定 Press 決定

Select “English”.
「English」を選ぶ

Enter.
決定する

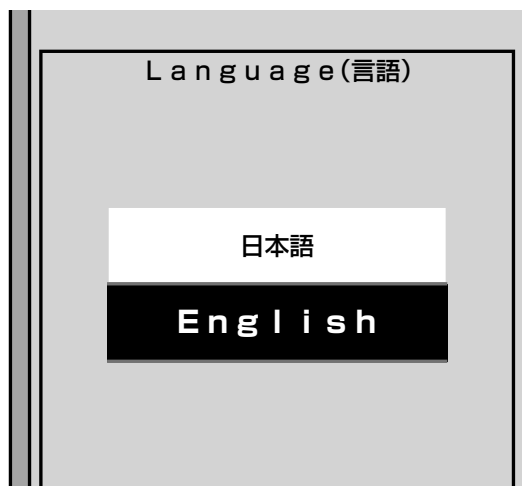

- The menu screen is now displayed in English.
- 画面表示が英語になります。

5 Press ホーム

Finish this operation.
終了する